**Before using the dishwasher, read the user instructions!**

# ADP 553 Quick Reference Guide

GB

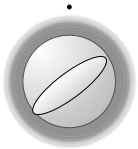

**Programme selector knob**



**On/Off button**

## Options

65°C

**"65°C" button**
This function should be used to obtain a 65°C programme in combination with the programme selector knob.

## Indicators

**Add regeneration salt**
Only add regeneration salt immediately before starting a wash programme.

| Programme chart | | | | Option Button 65° | Detergent 2) | | Consumption 3) | | |
|---|---|---|---|---|---|---|---|---|---|
| Programmes | | | Loading instructions | | B | C | Litres | kWh | Minutes |
| | Pre-Rinse | cold | Crockery to be washed later. | - | - | - | 5.0 | - | 10 |
| | Normal | 50°C | Normally soiled crockery. | - | X | X | 22.0 | 1.38 | 90 |
| eco | Eco 1) | 50°C | Lightly soiled crockery, with no dried-on food. | - | X | - | 17.0 | 1.24 | 80 |
| | Daily | 65°C | Normally or heavily soiled crockery. | X | X | - | 17.0 | 1.45 | 83 |
| | Intensive | 65°C | Recommended programme for heavily soiled crockery, especially suitable for pans and saucepans. | X | X | X | 22.0 | 1.49 | 93 |

1) **Reference programme for energy label in compliance with EN 50242 regulations;**
2) **Refer to "User instructions";**
3) **Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.**

Whirlpool is a registered trademark of Whirlpool USA

**5019 396 93000**
**(We reserve the right to make technical modifications)**

# How to use the appliance

**Further indications are given in the single chapters and in the user instructions.**

**Open the door**

**How to fill the detergent**

To open compartment press **A**.
Large compartment **B**:
With each wash cycle.
Small compartment **C:**
For programmes with pre-wash only.

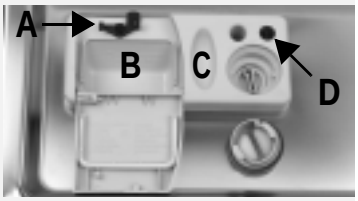


**Check the rinse aid level**

Mechanical indicator **D**.
Electric indicator on control panel (if provided).

**Check the regeneration salt level**

**On models with water softener system only.**
Mechanical indicator **E**. Electric indicator on control panel (if provided).

**Load the racks**

Refer to the dishwasher loading instructions.

**Close the dishwasher door, turn on the water tap**

**Select a programme**

Select the desired programme by turning the selector knob clockwise.

**Select options**

If necessary (and if provided).

**Press the On/Off button to start the programme**

**"Change programme"**
- Press the On/Off button, the On/Off indicator lamp switches off;
- Select another programme and press the On/Off button again. The On/Off indicator lamp switches on.

**Wash cycle**

- Only open the dishwasher if necessary (Warning: beware of hot steam).

**Switch off the appliance**

Press the On/Off button.

**Turn off the water tap, unload the racks**

**Warning: when the door is opened steam comes out!**
Unload the appliance, starting from the lower rack.

# Dishwasher loading instructions and racks provided

**Upper rack:** **depending on the model**

**Crockery holders (A) depending on the model:**

Long-handles utensils, cups and glasses.

Glasses should rest against side of basket or holders.

Tall, narrow items should be placed in the middle of the rack or on the holders.

When more space is needed, holders can be tilted against rack side.

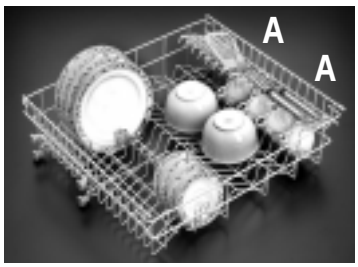


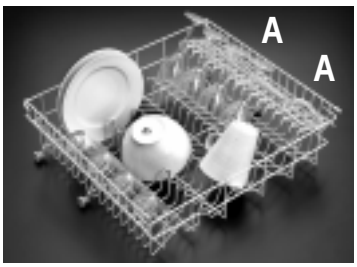


**Rack height adjustment (factory setting upper position):**

- The rack must be level on both sides.

**Lower rack:**

Tilting plate holders (4 seperately tiltable holders) (**F**) depending on the model.

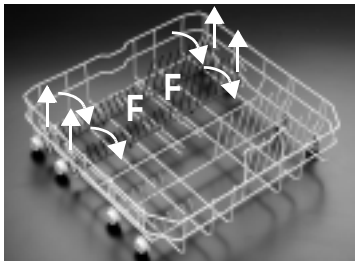


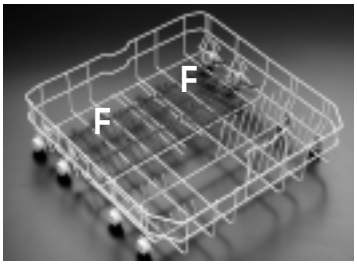


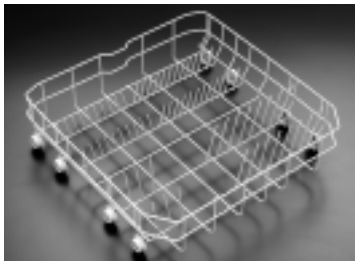

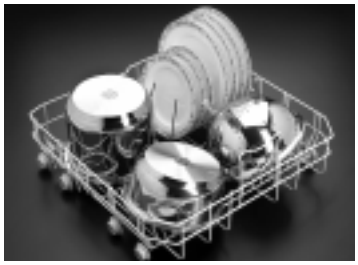

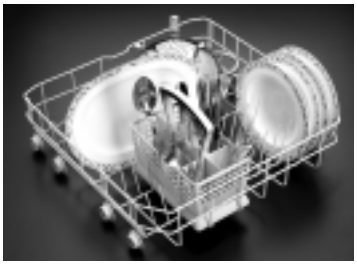

**Cutlery basket (G):**

Sharp knives and forks that might cause injury must be placed in the cutlery basket with the handles positioned upwards.
Some models are provided with a grid that can be fitted onto the cutlery basket to keep items separated.

**Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.**

# What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (* see also the corresponding chapter in the user instructions).

| Problem | Cause | Remedy |
|---|---|---|
| **The appliance is not working** | • No water supply. | • Open the tap. |
| | • The appliance does not load sufficient water. | • Clean the water supply tap filter.<br>• Ensure there are no kinks in the water hose. |
| | • There is a power failure. | • Insert the plug into the mains socket.<br>• Press the On/Off button.<br>• Close the door.<br>• Check the domestic circuit fuse. |
| | • Starting the selected programme. | • Press the On/Off button. |
| **If crockery is not perfectly dry** | • Insufficient rinse aid. | • Increase dosage *. |
| | • Residual water in cavities. | • Load crockery at an angle. |
| **If crockery is not perfectly clean** | • The water jet does not reach the crockery. | • Arrange crockery so that items do not touch each other. Load crockery upside down. |
| | • Insufficient detergent. | • Follow recommended detergent dosage. |
| | • Unsuitable programme. | • Select a more intense wash cycle. |
| | • Spray arms blocked. | • The spray arms must be able to turn freely. |
| | • Spray arm nozzles clogged. | • Remove any impurities obstructing the water flow *. |
| | • Incorrect detergent/detergent too old. | • Use a good quality detergent. |
| **Sandy or grainy residues** | • Clogged filters. | • Check filters regularly/if necessary clean *. |
| | • Filters incorrectly assembled. | • Insert the filter correctly *. |
| **Colour of plastic parts faded** | • Tomato/carrot juice,... | • Depending on the material, if necessary use a detergent with a greater whitening power. |
| **Deposits on crockery** | | |
| • removable | • Streaks on the crockery/glasses. | • Increase the rinse aid dosage *. |
| | • Streaks on glasses. | • Reduce the rinse aid dosage |
| | • Layer of salt on crockery/glasses. | • Close the salt container lid properly *. |
| • not removable | • Insufficient water softening, calcium deposits. | • Change water hardness setting, if necessary add salt *. |
| **Opaque glasses/ glasses not sparkling** | • Cannot be washed in the dishwasher. | • Use suitable glasses. |
| **Rust on cutlery** | • Not made of stainless steel. | • Use suitable cutlery. |

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.